


MAXXUM 101/HC  
101 LBS THRUST  
36 VOLT 46 AMPS  
52" SHAFT

for use with "L" serial numbers  
2-year warranty

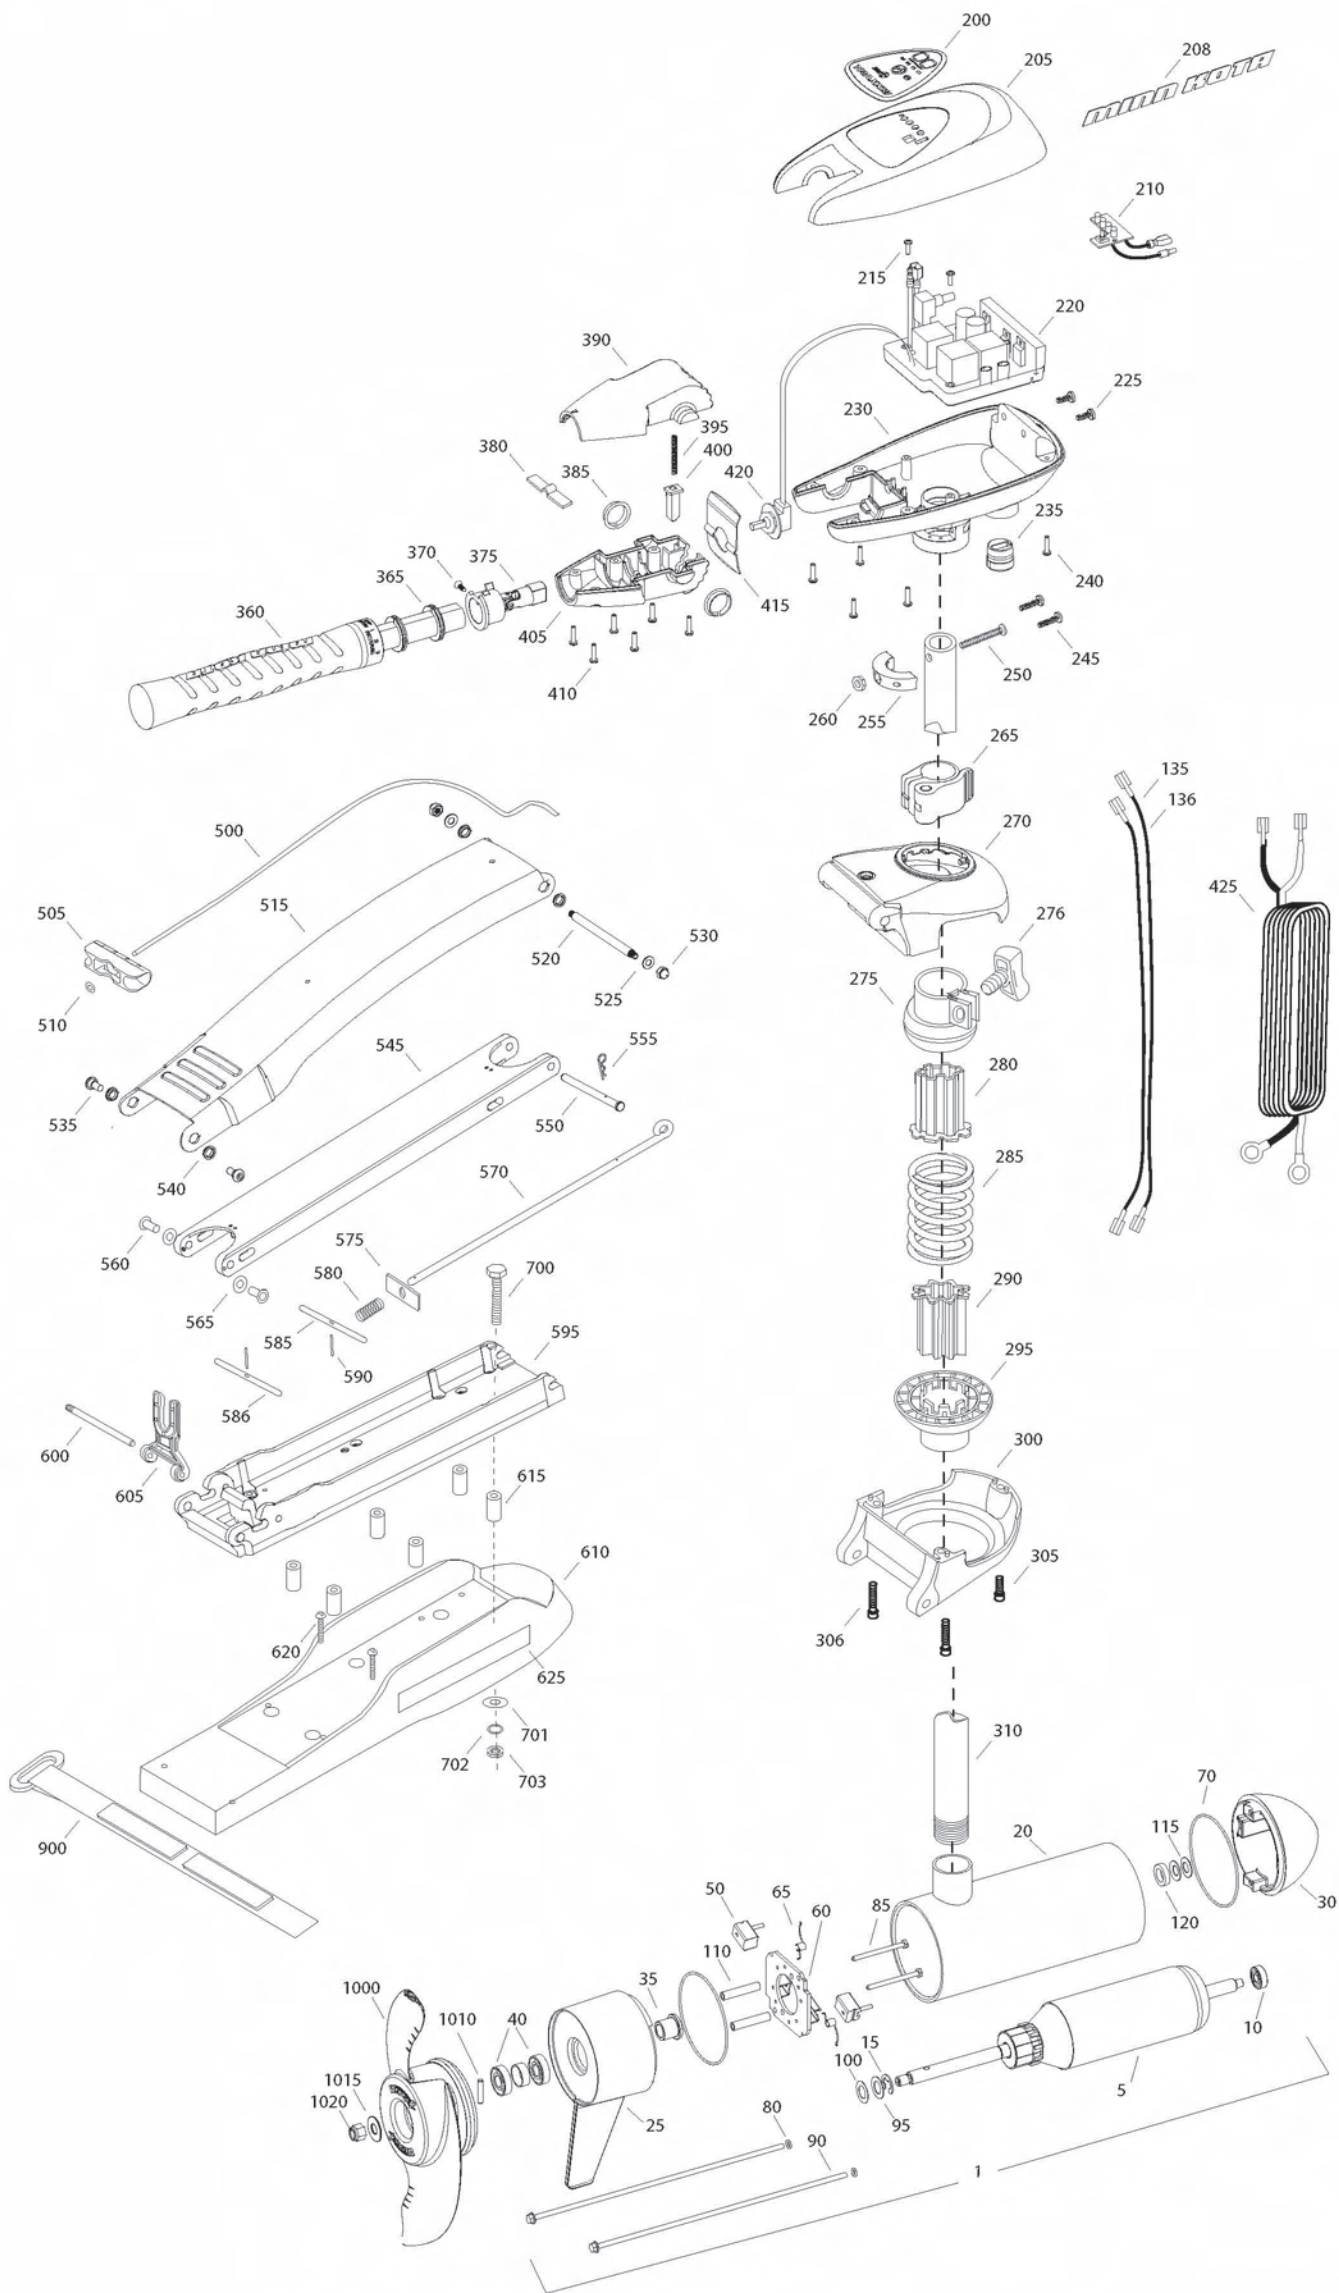

In the U.S.A., replacement parts may be ordered directly from MINN KOTA Parts Dept., 121 Power Drive, P.O. Box 8129 Mankato, Minnesota 56002-8129. In Canada, parts may be ordered from any of the Canadian Authorized Service Centers shown on the enclosed list. Be sure to provide the MODEL and SERIAL numbers of your motor when ordering parts. Please use the correct part numbers from the parts list. Payment for any parts ordered from the MINN KOTA parts department, may be by cash, personal check, Discover Card, MasterCard or VISA. To order, call 1-800-227-6433 or FAX 1-800-527-4464.

Fuera de los Estados Unidos, consultar la lista anexa para ubicar el Centro de servicio autorizado MINN KOTA. No dejar de incluir el número del MODELO y el número de SERIE del motor para el cual se solicitan las piezas. Usar siempre los números de pieza correctos indicados en la lista de piezas.

Item	P/N	Description	Qty	Item	P/N	Description	Qty	Item	P/N	Description	Qty	Item	P/N	Description	Qty
1	2316285	36V Motor 52" FW	1	■	2990957	Handle assy, VARS [360-410]	1	■	1378132	Propeller kit WW2					
5	2-100-216	Armature assembly	1	360	2990456	Grip/handle assy, VARS [360-375]	1	■	2994876	Propeller bag assy					
10	140-010	Bearing	1	365	2060015	Bearing, handle	2	1000	2331160	Propeller WW2	1				
15	788-040	Retaining ring	1	370	2063405	Screw, #6 PFH SS	1	1010	2262658	Drive pin, large	1				
20	2-200-110	Center housing assembly	1	375	2884092	Yoke / spider assy, VARS	1	1015	2091701	Washer, prop, large	1				
25	2-300-160	Brush end housing assembly	1	380	2302742	Spring, detent, off	1	1020	2093101	Nut, nylock, prop, large	1				
30	421-276	Plain end housing assembly STD	1	385	2060005	Bearing, handle pivot	2								
35	144-017	Flange bearing	1	390	2060900	Handle pivot, top	1								
40	880-025	Seal	2	395	2302745	Spring, release button	1								
50	188-094	Brush	2	400	2063700	Button, release	1								
60	2-600-148	Brush plate assembly	1	405	2060905	Handle pivot, bottom	1								
65	975-041	Brush spring	2	410	2303412	Screw, #6 x 5/8 SS	6								
70	701-043	O-ring, motor	2												
80	701-009	O-ring, thru-bolt	2	415	2062715	Spring, handle pivot	1								
85	830-027	Screw, 10-32 x 2	2	420	2061700	Washer, pot holder	1								
90	830-096	Thru-bolt	2	425	2992523	Leadwire assy	1								
95	990-051	Washer, steel	2												
100	990-052	Washer, nylatron	2	■	2991840	Mount, Bow Assy W/ Bowguard	1								
110	973-025	Spacer, brush plate	2			[270-306], [500-625]									
115	992-010	Washer, Belleville	2	500	2251601	Rope	1								
120	992-045	Spacer, thrust	1	505	2150400	Pull grip	1								
135	640-018	Leadwire, black	1	510	2151700	Washer	1								
136	640-123	Leadwire, red	1	515	2264241	Arm, upper, std, fw	1								
■	2889460	Seal and O-ring Kit		520	2262605	Pin, bowguard, upper	1								
				525	9908236	Washer, 1/4", ZP	2								
200	2185616	Decal, c-box cover	1	530	2223100	Nut, 5/16-18 SS	2								
205	2060295	C-box cover	1	535	2263500	Bolt, shoulder	2								
208	2065665	Decal - MinnKota	2	540	2293501	Bushing, SS	2								
210	2074072	Battery meter, 36v FW	1	545	2994307	Arm, Lower, std, fw	1								
215	3043427	Screw, #8 x 7/8 SS	2	550	2262607	Pin, clevis ZP	1								
220	2184007	Control board, 24/36v	1	555	2260805	Spring, clip	1								
225	2303434	Screw, #8-30 x 5/8 SS	2	560	2261318	Bushing, nyloner	2								
230	2062501	Control box, VARS, FW	1	565	2261708	Washer, spacer, .010 thk	2								
235	2062905	Strain relief	1	570	2153602	Eyeshaft, ZP	1								
240	2303412	Screw, #6 x 5/8 SS	6	575	2262703	Spring stop	1								
245	2263434	Screw, #8 x 1 SS	2	580	2152700	Spring, lock bar	1								
250	2383407	Screw, #10-24 x 2 SS	1	585	2233622	Lock bar, front, ZP	1								
255	2061515	Collar, c-box	1	586	2233620	Lock bar, back, ZP	1								
260	2383124	Nut, 10-24, nylock, SS	1	590	2152610	Spring pin	2								
265	2991521	Cam lock/depth collar assy	1	595	2773987	Bowplate w/ insert, std, fw	1								
				600	2260506	Hinge pin, ZP	1								
■	2991760	Bowguard Assembly [270-306]	1	605	2293811	Yoke, Max	1								
270	2261976	Bracket, top	1	610	2263912	Motor rest, std, fw	1								
275	2261525	Spring sleeve, Upper	1	615	2261505	Spacer, motor rest	6								
276	2011365	Knob, collar	1	620	2263434	Screw, #8, SS	2								
280	2264702	Tube insert, bowmount	2	625	2265514	Decal, motor rest	2								
285	2262711	Spring, bowguard	1												
295	2261535	Spring sleeve, Lower	1	■	2994830	Bag assembly	1								
300	2991775	Bracket Assy, bottom	1	700	2263431	Screw, 1/4-20 x 3 1/2" PPH, SS	6								
305	2263423	Screw, 5/16 x 1" SHCS ZP	1	701	2301720	Washer, rubber mounting	6								
306	2263425	Screw, 5/16 x 2.5" SHCS ZP	2	702	2261713	Washer, 1/4 SS	6								
				703	2263101	Nut, 1/4-20 Nylock, SS	6								
310	2032068	Tube Composite 52"	1												
				900	2263804	Strap, hold down	1								

\* This item is part of an assembly. This item cannot be sold separately due to machining and /or assembly that is required.

# Maxxum 101 is 36-volt only!

**THIS IS A UNIVERSAL MULTI-VOLTAGE DIAGRAM. DOUBLE CHECK YOUR MOTORS VOLTAGE FOR PROPER CONNECTIONS  
CECI EST UN SCHEMA À TENSION MULTIPLE UNIVERSEL. REVÉRIFIEZ LA TENSION DE VOTRE MOTEUR POUR BIEN LE BRANCHER.**

Over-Current Protection Devices not shown in illustrations.  
Les Artifices de Protection Suractuels non montrés en illustrations.

